Cover/Windscreen Set for R-26

※ 日本語は裏面に掲載しています。

OP-R26CW Owner's manual

Roland

Before using this product, carefully read the sections entitled: "USING THE UNIT SAFELY" and "IMPORTANT NOTES". These sections provide important information concerning the proper operation of the product. Additionally, in order to feel assured that you have gained a good grasp of every feature provided by your new product, Owner's manual should be read in its entirety.
The manual should be saved and kept on hand as a convenient reference.

Work Cover/Strap

1 Insert the R-26 into the work cover, in the direction shown in the illustration.

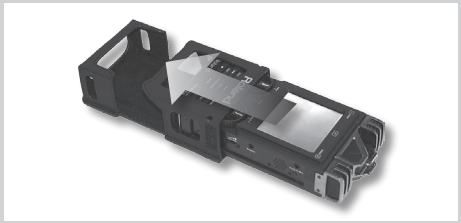

- To ensure that the R-26 doesn't get scratched when you insert it inside this product, carefully check to make sure that no dirt, dust, or other foreign matter is stuck to the surface of the R-26 or on the inside of the cover.
- When using the work cover, always make sure that you also have the strap attached.

2 After the work cover has been put on the R-26, pass the strap from above through the slot on the R-26.

3 As shown in the illustration, attach the strap securely, so it won't come loose.

- Attach the strap securely so that it does not easily become detached. If the strap is loose, when carrying the R-26, it could be dropped, possibly resulting in damage or injury.
- Use only the provided strap. The included strap is meant for exclusive use with the R-26. Do not use this strap for other products.
- Check to make sure that the strap is securely fastened.
- In households with children, be careful with the parts that are used to adjust the strap, so as to prevent accidental ingestion.
- Do not spin or swing the R-26 while holding it by the strap. This is extremely dangerous, as it may cause the strap to become detached; or may even break the strap.

Copyright © 2011 Roland CORPORATION
All rights reserved. No part of this publication may be reproduced in any form without the written permission of Roland CORPORATION.

Roland is a registered trademark of Roland Corporation in the United States and/or other countries.

Travel Cover

1 With the work cover still in place, insert the microphone section of the R-26 to the travel cover.

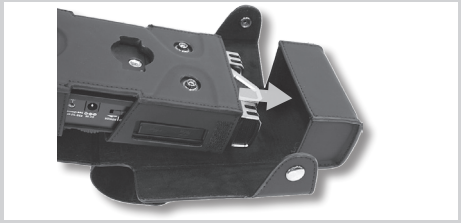

2 Fasten the snap fasteners on the rear (three places).

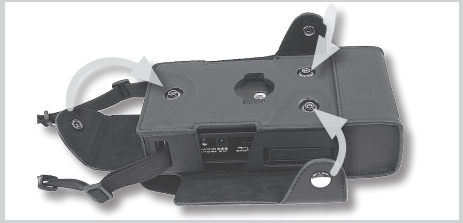

Windscreen

1 Align the cloth portion on the inside of the windscreen with the hook and loop fastener on the work cover.

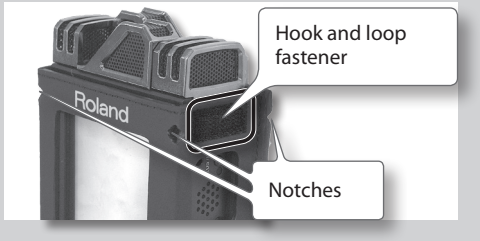

2 Attach the windscreen, while making sure that the elastic is held by the notches in the work cover (four places).

- Please note that some of the acrylic fur of the windscreen may fall out. Also note that it is not water repellent.

USING THE UNIT SAFELY

- Do not drop the R-26 or subject it to strong impact while it is in this product. Also, be careful not to drop the unit when removing it from this product.

IMPORTANT NOTES

- Do not expose the product to direct sunlight, place it near devices that radiate heat, leave it inside an enclosed vehicle, or otherwise subject it to temperature extremes. Excessive heat can deform or discolor the product.

Maintenance

- For everyday cleaning wipe the product with a soft, dry cloth or one that has been slightly dampened with water. To remove stubborn dirt, use a cloth impregnated with a mild, non-abrasive detergent. Afterwards, be sure to wipe the product thoroughly with a soft, dry cloth.
- Never use benzine, thinners, alcohol or solvents of any kind, to avoid the possibility of discoloration and/or deformation.

Main Material

Cover	Polyurethane cloth (Front cloth) Polyester (Inner cloth)
Windscreen	Acrylic
Strap	Polypropylene tape

* In the interest of product improvement, the specifications and/or appearance of this product are subject to change without prior notice.

For C.A. US (Proposition 65)

WARNING

This product contains chemicals known to cause cancer, birth defects and other reproductive harm, including lead.

R-26 カバー／ウインドスクリーン・セット

OP-R26CW 取扱説明書

Roland

本製品を正しくお使いいただくために、ご使用前に「安全上のご注意」と「使用上のご注意」をよくお読みください。また、本製品の優れた機能を十分ご理解いただくためにも、本書をよくお読みください。
本書は必要なときにすぐに見ることができるよう、手元に置いてください。

ワーク・カバー／ストラップ

1 図の向きで、R-26 をワーク・カバーに入れます。

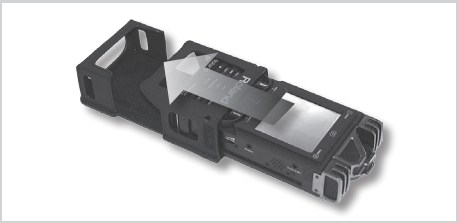

- R-26 本体にキズをつけたりしないよう、装着時にはゴミ・ホコリなどの異物が R-26 本体やカバー内部に付着していないことを、よく確認してください。
- カバーを使用されるときは、必ずストラップをつけた状態でお使いください。

2 ワーク・カバーを装着した R-26 の上からストラップを通します。

3 図のように、ストラップが外れないようにしっかりと取り付けます。

- ストラップはストラップ取り付け軸に、容易に外れないようにしっかりと取り付けてください。外れかけた状態で使用すると持ち運びの際に落下の危険性があり、故障や怪我の原因になります。
- ストラップは必ず付属のものを使用してください。また、付属のストラップは R-26 専用です。他の製品には使用しないでください。
- ストラップがしっかりと取り付けられているか、確認してください。
- お子様のいるご家庭で使用する場合、お子様がストラップ調節パーツを飲み込まないように注意してください。
- ストラップを持って本機を振り回したり、大きくゆらしたりしないでください。ストラップが外れたり、切れたりして、大変危険です。

© 2011 ローランド株式会社
本書の一部、もしくは全部を無断で複写・転載することを禁じます。
Roland は、日本国およびその他の国におけるローランド株式会社の商標、または登録商標です。

トラベル・カバー

1 ワーク・カバーをつけた状態で、R-26 のマイク部分をトラベル・カバーに差し込みます。

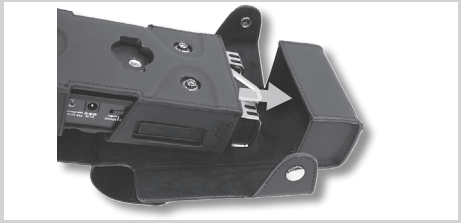

2 裏側のホック（3 か所）をとめます。

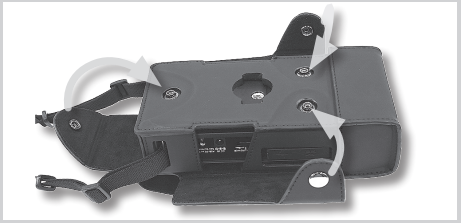

ウインドスクリーン

1 ウインドスクリーン内側の布の部分をワーク・カバーのマジックテープに合わせます。

2 ワーク・カバーの切りかき（4 か所）にゴムがかかるように、ウインドスクリーンを取り付けます。

- ウインドスクリーンのアクリル起毛は、抜けることがあります。また、撥水性は備えていません。

安全上のご注意

- 本体を収納した状態で落としたり、強い衝撃を与えないでください。また、取り外し時の落下にご注意ください。

使用上のご注意

- 直射日光の当たる場所や、発熱する機器の近く、閉め切った車内などに放置しないでください。変形、変色することがあります。

お手入れについて

- 通常のお手入れは、柔らかい布で乾拭きするか、堅く絞った布で汚れを拭き取ってください。汚れが激しいときは、中性洗剤を含んだ布で汚れを拭き取ってから、柔らかい布で乾拭きしてください。
- 変色や変形の原因となるベンジン、シンナーおよびアルコール類は、使用しないでください。

主な素材

カバー	ポリウレタン（表生地） ポリエステル（裏生地）
ウインドスクリーン	アクリル
ストラップ	ポリプロピレン・テープ

※ 製品の仕様および外観は、改良のため予告なく変更することがあります。

* 5 1 0 0 0 2 2 6 2 4 - 0 1 *